

INSTALLATION INSTRUCTIONS


Air Vent Fin Guard Set

(99000-99035-01V)

Weight: 400g (1 set)


Mounting

1. Thoroughly clean and dry the area around the air vent opening. If this area is not clean and dry, the adhesive tape used to secure the guard to the leg shield will not stick.

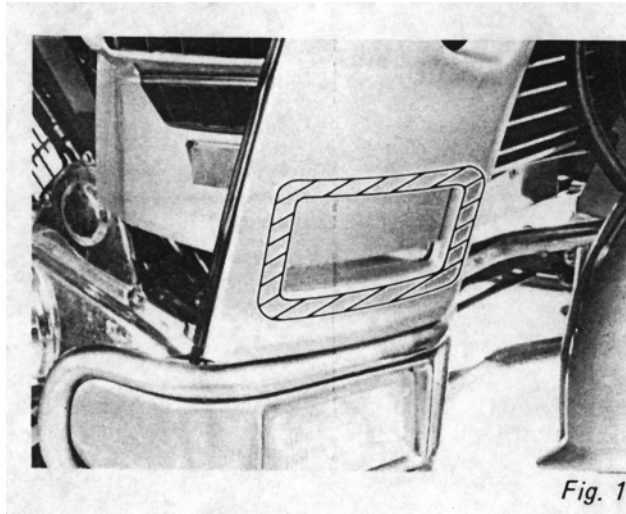

2. Remember, the guards have top and bottom sides as illustrated in Fig. 2. The gap between the two arrowheads appears wide when you are looking at the top side, but narrow when looking at the bottom side. Before installing each guard, be sure to distinguish between the top side and bottom side.

Side view of TOP

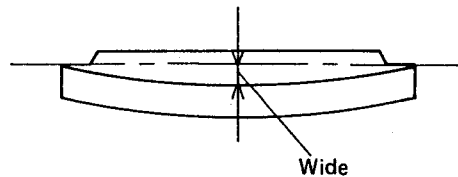

Side view of BOTTOM



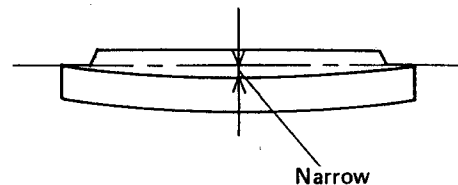


Fig. 2

3. Peel the protective tape off the four sides of the guard: the tape is on the back.

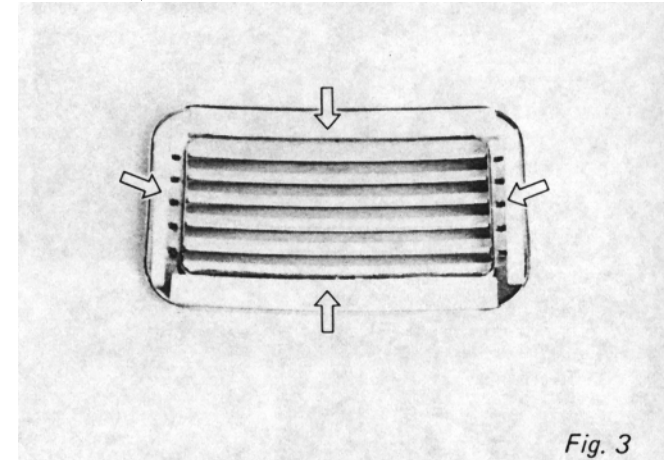

4. Fit the guard to the leg shield, positioning it squarely over the opening and making sure not to bend or tilt it. Apply hand pressure to the guard to obtain a good bond.

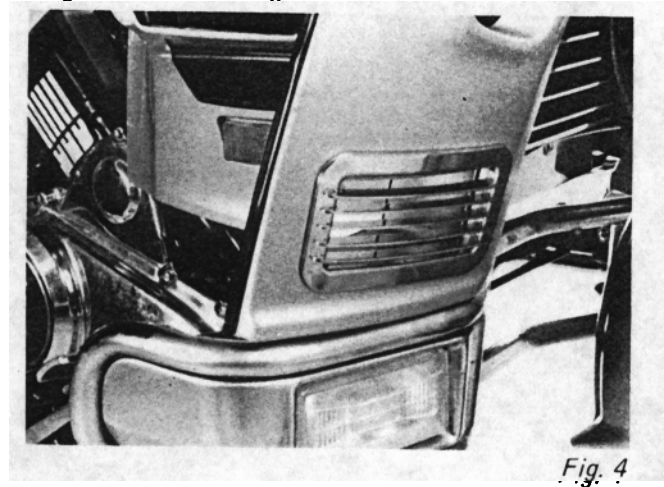

5. Use the above procedure for both left and right sides.