
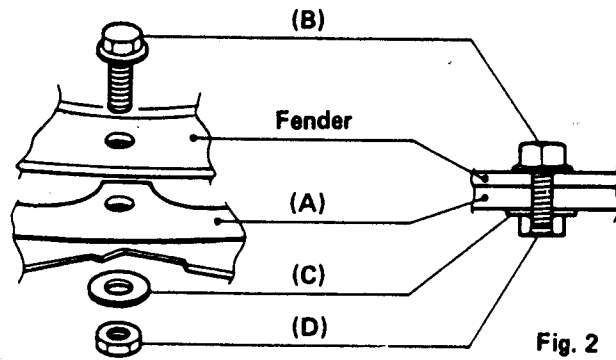


Front Mud Flap 53310-24A00

1. Determine the center line of the fender at the place shown in the Figure 1.
2. Determine the center line of the mud flap.
3. Align the center line of the fender with the center line of the mud flap, causing the ends of the mud flap to position in the place shown in the Figure 1. Mark off center points for drilling holes.
4. Drill four holes 6.5mm (0.26in.) in diameter into the fender.
5. Install the mud flap, flat washer and nut in this order with the bolt to the fender. Refer to the Figure 2.

INSTALLATION INSTRUCTIONS

Front Mud Flap (53310-24A00)

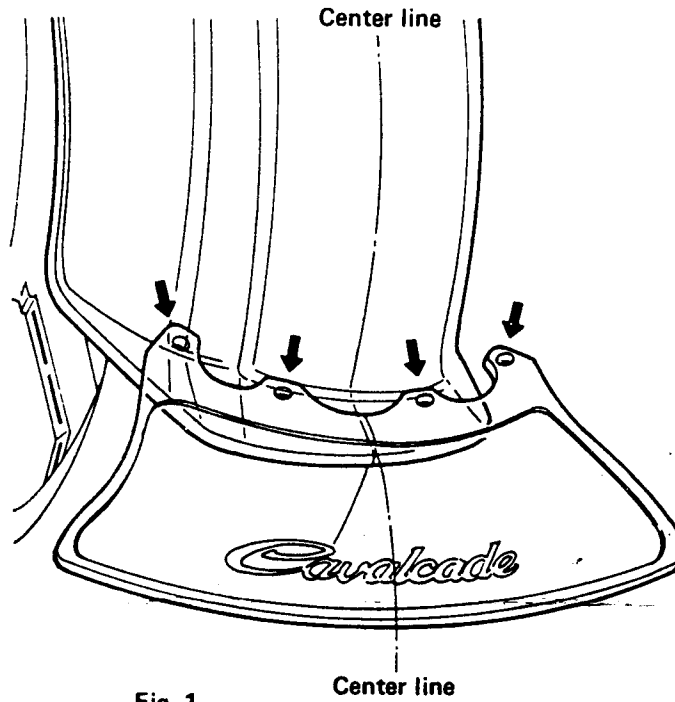

Letter	Qty	Description	Letter	Qty	Description
A	1	Mud Flap, Front	C	4	6mm Flat Washer
B	4	6 x 16mm Flanged Bolt	D	4	6mm Hex. Nut