

INSTALLATION INSTRUCTIONS

Saddlebag Compartment Chrome Trim (99000-99031-12V) Weight: 600g (1 set)

NOTE:

This installation requires the use of a drill and a 6 mm drill bit.

- ① : Saddlebag compartment chrome trim
- ② : M5x12 mm truss-head screw
- ③ : Plain washer
- ④ : Rubber pad

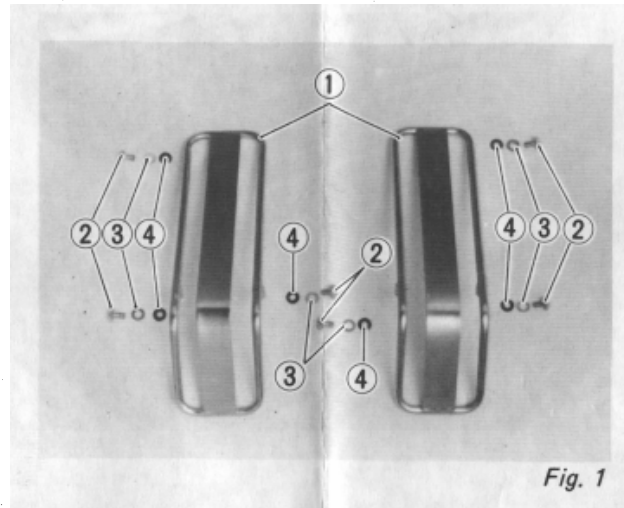


Fig. 1

2. Mark off the positions of three legs with a felt tip pen, taking care not to make scratch marks on the compartment lid.
3. Using the drill and 6 mm drill bit, make three holes in the lid at the marked positions: be sure to hold the drill squarely relative to the lid surface.



Fig. 3

Mounting

1. Fig. 2 shows where to position both the left and right chrome trims on their respective saddlebag compartment lids. Note that the location is given in reference to the two-legged side of each trim.


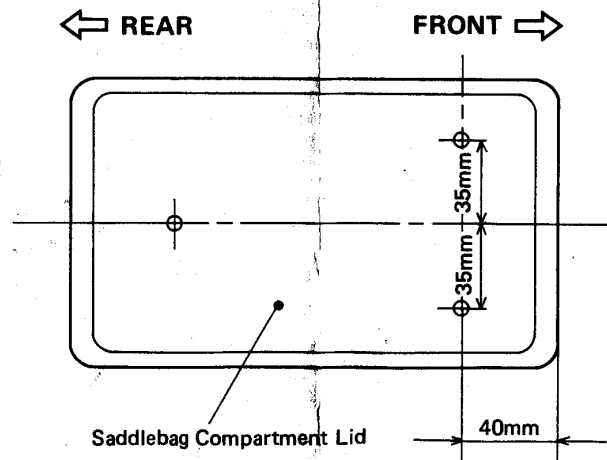


Fig. 2

INSTALLATION INSTRUCTIONS

4. Having drilled holes for the right and left lids, install and secure each trim in this sequence: Place trim ① in position on the lid, with a rubber pad ④ under each leg; fit plain washers ③ to the inner side of lid; and screw the three M5x12 mm truss-head screws ② into the three legs from inside the lid

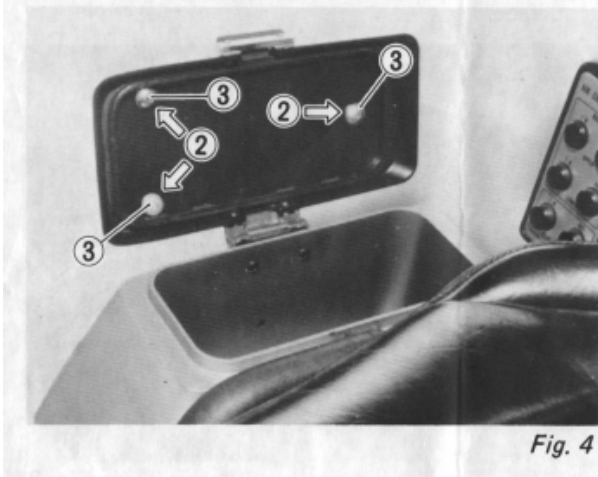

5. Adjust each trim ① as necessary, making it true on the lid, and tighten the screws ② to secure the trim.



6. Be sure that the two trims, right and left, are identically set in place.